


# TAMAGOTCHI CONNECTION

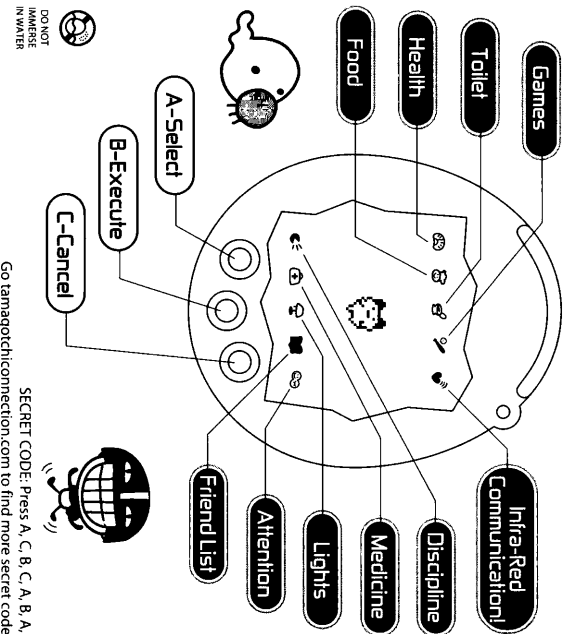

**1 Tamagotchi Connection is an interactive virtual pet that will evolve differently depending on how well you take care of it. Play games with it, feed it food and cure it when it is sick and it will develop into a good companion!**

Tamagotchi Connection has some special functions!

- 1- It can communicate with other Tamagotchi friends, play games, and exchange gifts.
- 2- You can store up to 50 friends' names in your Tamagotchi friend list!
- 3- It can use play with or wear the gifts it receives.

## HOW TO WAKE YOUR TAMAGOTCHI

- 1- Pull out the tab from the side of the casing and Tamagotchi will appear after a long beep.
- 2- To reset, press the Reset button on the back of the casing with a pointed object such as a pen.

**NOTE: do not apply too much pressure, especially with a sharp object.**

- 3- Set up Time and Date. Press button (B), the time screen will appear. Month, days, hours and minutes will be set up one by one using button (A) to scroll and button (B) to choose/set the correct number.

**NOTE: As some special events occur on specific dates, please set up the date carefully.**

- 4- Set up your birthday month/date... Tamagotchi might celebrate your birthday.
- 5- It will then return to the normal screen. After 1 minute, you will discover if your Tamagotchi is a boy (black) or a girl (white).

**2 HOW TO TAKE CARE OF YOUR TAMAGOTCHI**

**HEALTH METER**

Select the Health Meter icon with button (A) to check the following information regarding your Tamagotchi: Level of Hunger - Level of Happiness - Level of Training - Age - Weight - Name - Gender - Generation.

**LEVEL OF HUNGER/LEVEL OF HAPPINESS**

The number of hearts you have indicate your Hunger/Happiness (the more the better).

**LEVEL OF TRAINING**

Number of dots indicates level of training (the higher the better).

**AGE/WEIGHT/NAME**

Every day your Tamagotchi lives, it becomes around 1 year older. Keep it healthy and don't allow its weight to increase too much.

**GENDER/GENERATION**

Check the gender of your Tamagotchi: boy or girl. Check your Tamagotchi's generation. If your Tamagotchi receives a Tamagotchi egg on the screen, it will become the next generation of your Tamagotchi.

**FEEDING TIME**

Press button (A) to select the "Food Icon". Then press button (B) to choose meal, snack or treat. Check your Tamagotchi's hunger level before feeding or it might get sick or become overweight.

**TOILET/FLUSH**

When your Tamagotchi makes a mess, press button (A) to select the "Toilet Icon" and use button (B) to clean up.

**SINGLE PLAYER GAMES**

As your Tamagotchi grows at each stage of life, the number of games to be played increases to four total games. Press button (A) to select "Game" and press button (B) to choose a game you want to play.

**JUMP GAME**

Press button (A), (B) or (C) in 0.5 sec. when the appropriate light comes on.

**BUMP GAME**

Press button (A) to stop the bar. The length of the bar determines the power level.

**HEADING GAME**

Press button (A) or (C) to move your Tamagotchi left or right, then press button (B) to make it head the ball.

**SLOT GAME**

Press button (A) to choose how many points you want to bet (1 to 9), then press button (B) to reel the slot wheels.

**PAUSES**

## HOW TO MAKE YOUR TAMAGOTCHI GROW

- 6- Select your Tamagotchi name using button (A) to scroll through the alphabet and button (B) to choose.

**Your Tamagotchi name can contain up to 5 letters. Once you have selected a name, you cannot change it.**

## THE GROWTH PROCESS

Your Tamagotchi can evolve in different stages depending on how you care for it.

Egg → baby → child → teenager → adult

## HOW TO MAKE YOUR TAMAGOTCHI NEED SOMETHING

 
Tamagotchi needs something: Seeding time, Toilet, Games, Connection (IR), Health Meter, Discipline, Medicine, Lights, Friend List.

When Tamagotchi needs something, it is highlighted. Check what it needs with the Health Meter and play, feed or discipline it.

## 4 FRIEND LIST

Use button (A) to select the "Book Icon" and button (B) to check your list of "friends" and "presents".

**FRIENDSHIP LEVEL:** Use button (A) to select "friend" and button (B) to choose. Press button (B) again to check your level of friendship. Your friendship level improves the more connections you make with other Tamagotchi. Friendship levels are shown below:



If you connect to more than 50 friends, "SORRY!! LIST FULL" will appear. You must delete one of your friends if you wish to add more. Press button (A) to scroll through your friends. Press button (B) to choose the friend to be deleted. You will be asked to confirm your selection by choosing "YES" followed by "SURE".

**PRESENTS** Before you send a present to your friend, the present must be wrapped. Press button (A) to select "Present". Choose "Food" or "Item" to select what you want to send by pressing button (A) and button (B) to select. Scroll through the items and press button (B) to select the item. You will be asked to confirm your selection by choosing "Yes" followed by "Sure" for wrapping the item. You may also unwrap the present box by the same command.

## THE MATCHMAKER

When your Tamagotchi grows old without finding a partner, a matchmaker may appear to try and find you a partner. If you are unable to find a suitable partner your Tamagotchi will continue to grow old until it passes away.

## 5 HOW TO REPLACE BATTERY

If you select "DOWNLOAD" your Tamagotchi will be restored from the last major event - waking up, growing up, IR communication.

Note: You may need to reset the time. If you select "RESET" your Tamagotchi will restart from the very beginning. This will erase all entries (friends and gifts) from your friend list.

**HOW TO REPLACE BATTERY**

Requires 1 CR-2032 3V battery. Using a small screwdriver, turn the screw counter clockwise to loosen. Remove back as shown, and remove the old battery. Insert the new battery as indicated in illustration.

**HOW TO SET UP TIME**

- To check time in normal screen mode, press button (B).
- To change time, press button (B) to show current time, press and hold buttons: (A) and (C) together until the setting time mode starts.

Select 12H or 24H clock format. Press button (A) to select and button (B) to choose/set.

**RESET OPTION**

If it is the first time you have activated your Tamagotchi.

- If the screen is not clear, image freezes and does not move after a long time.
- When you have changed the battery.

After pressing the reset button, you can choose either "DOWNLOAD" or "RESET".

## WARNING: CHOKING HAZARD - Small parts. Not for Children under 3 years.

**CAUTION: PLEASE READ BEFORE PLAYING WITH TOY**

- Do not 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
- Be careful not to pinch fingers with hinged parts of toy.

**CAUTION:** Keep batteries away from children. Batteries may be harmful if swallowed. Requires 1 CR-2032 (3V) battery. Battery included. **NOTE:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

Conforms to safety standard ASTM F963-05. Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Kaelala Avenue, Cypress, California 90630. TM & © 2005 Bandai. TAMAGOTCHI CONNECTION and all related logos, names and distinctive likenesses thereof are the exclusive property of Bandai. All rights reserved.

## 3 SHOP

Items or special food can be bought with the "Couch-Points" you earn. Press button (A) to select "Shop" and press button (B) to choose an item or food you want to buy.

**Did you get secret codes?**

At the shop/casino screen, press button (A) three times in 2 sec. after pressing button (A) once. When the shop owner's face appears, punch in the secret code revealed in the first page (left); there are 5 total secret codes, each revealing something different. Input all 5 secret codes to reveal a special skin (left).

**Did you discipline your Tamagotchi well?**

Your Tamagotchi may send an unexpected present to your friend. This is because your "Training" level is not enough for him/her. Select "TIME OUT" for discipline.

**Did you discipline your Tamagotchi well?**

Your relationships improve and develop as you make more connections with other Tamagotchi. After several connections, you and your favorite partner may become good companions. The female Tamagotchi will leave two Tamagotchi eggs - one on each screen. One of the eggs will stay with the female and the other moves to the male's screen. Now you are ready to start raising the second generation of Tamagotchi.

## 2 CONNECTION/COMMUNICATION

(Using IR SENSORS)

- 1- Press button (A) to select the "IR Icon". Choose the Tamagotchi version you friend has by pressing (A) then (B) to select.
- 2- Choose "Game" or "Present". See below for command's details.
- 3- "STAND BY" appears on the screen.
- 4- Position the infrared top of one Tamagotchi towards the infrared top of the other.
- 5- Press button (B) to start IR communication.

**COMPETING GAMES**

4 fun competing games are randomly played.

**PRESENTS**

You may send your favorite present to your friend. Choose a present and wrap before sending. See "FRIEND LIST" section to unwrap the present in advance.

**WARNING: CHOKING HAZARD - Small parts. Not for Children under 3 years.**